


# SMS on Huawei B970b


---

## Accessing the SMS facility:


Step 1: Switch on your PC's wireless and connect to SSID named gateway (see below).

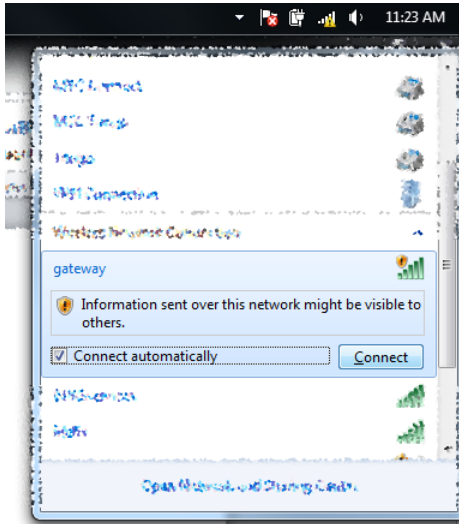


Step 2: Once connected, open your internet browser and key in <http://192.168.1.1> and press ENTER.

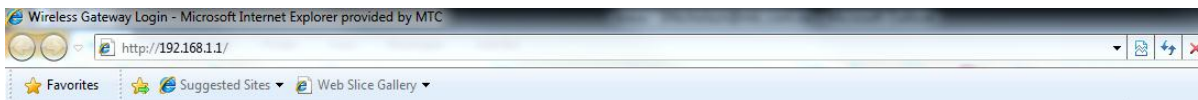

Step 3: Key in your password (default is **admin**) on Welcome screen and click login.

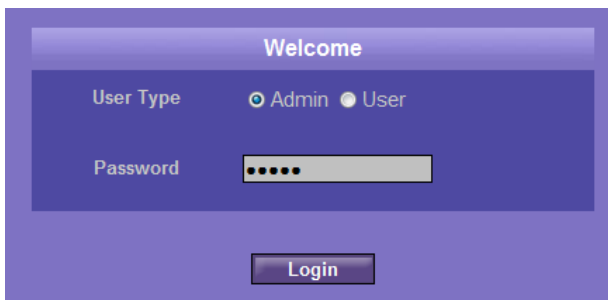


Step 4: You will now be prompted to validate the SIM PIN. Key in the PIN and click Apply.

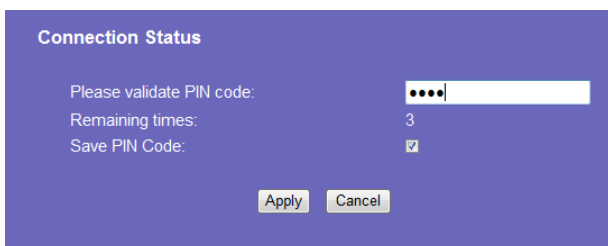

Step 5: Click Continue.

Step 6: Click SMS (left column). The SMS menu will now appear.

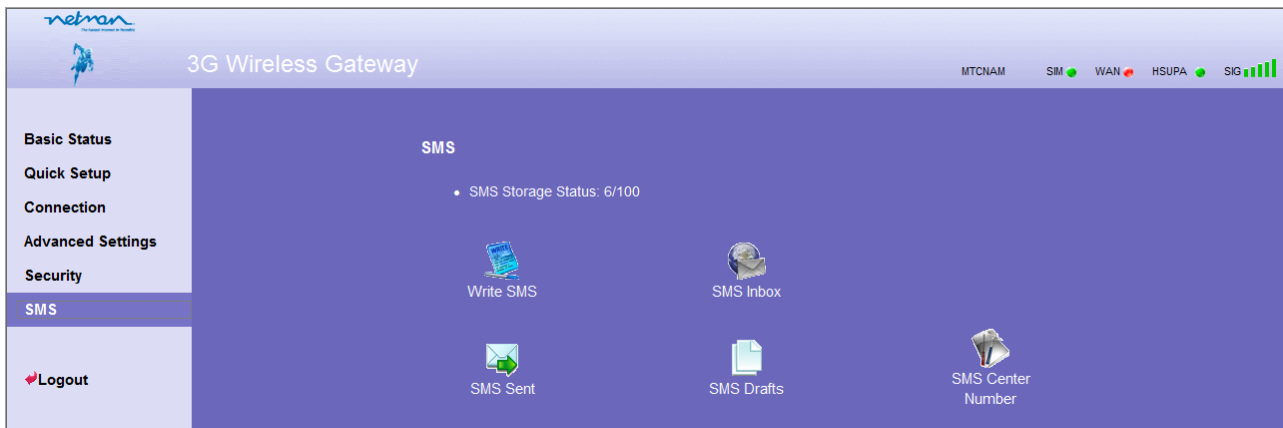


## Icons:




Clicking this icon provides the user with the option to send a SMS.




Clicking this icon will show the user the SMS state (read or unread), the date, the sender number, the content of the SMS and the option to delete an SMS or several.

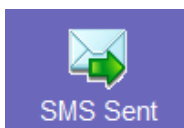

Clicking this icon displays the sent text messages, the number to whom the message was sent to, the content and provides the user with the option to delete an SMS or several.

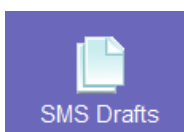

Clicking this icon displays text message to be sent that the user may have saved.

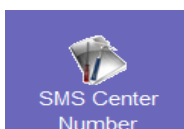

Clicking this icon provides the user with the option to change the SMS Center Number depending on the current network provider. For MTC this is set to +264811900200.

